ALLIANCE
TRUCK PARTS

PREMIUM STAINLESS STEEL ACCESSORIES

alliancebrandparts.com

TABLE OF CONTENTS

Light Options 3

Coronado Accessories 2010+ . . . . . 4 - 6

Coronado Accessories Pre 2010 . . . . . 7 - 9

Cascadia Accessories . . . . . 10 - 11

Columbia Accessories . . . . . 12 - 14

Classic/XL Accessories . . . . . 15 - 20

Century Class/Severe Duty/FLD-112/FLD-120 & M2 Business Class Accessories . . 21 - 25

Universal Accessories . . . . . 26 - 28

Sterling Accessories . . . . . 29 - 31

CUSTOMER SERVICE CONTACT

TOLL FREE: 1-877-884-8555

FAX: 1-519-650-3334

EMAIL US AT: inquiries@dietersaccessories.com

X3 LED	Amber (X3A) DML DUAX3AG2LED
	Red (X3R) DML DUAX3RG2LED
X3	Amber (X3A) DML DUAX3AG2
	Red (X3R) DML DUAX3RG2

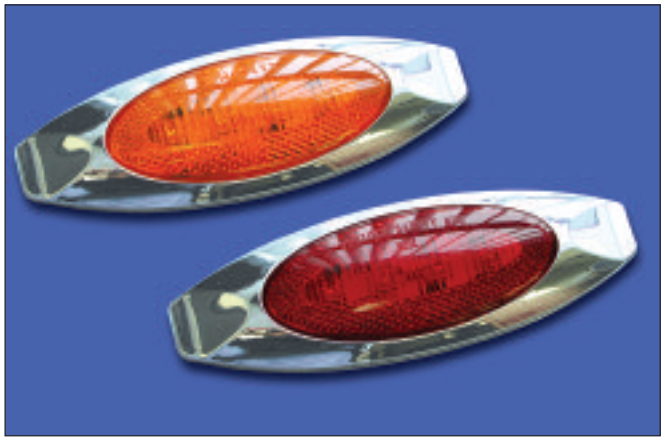

X2 LED	Amber (X2AG2) DML DUAX2AG2LED
	Red (X2RG2) DML DUAX2RG2LED
X2	Amber (X2AG2) DML DUAX2AG2
	Red (X2RG2) DML DUAX2RG2

2" Round

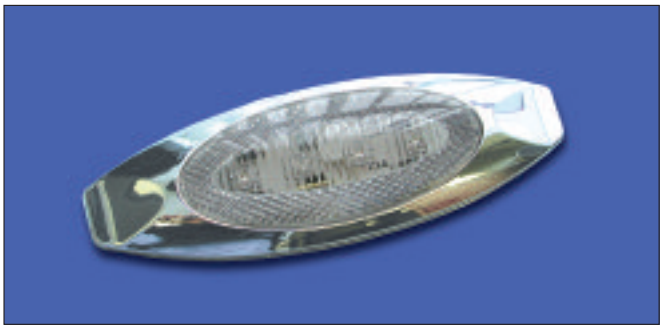

DML DUAX2ACG2LED, DML DUAX2RCG2LED

2" Round LED Starburst **(bezel not included)**

Amber	DML DUATL3050A
Red	DML DUATL3050

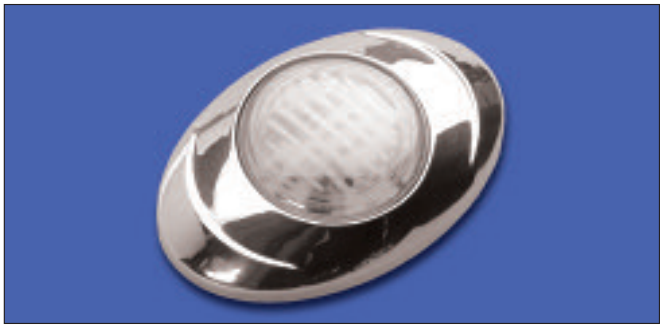

DML DUAX3ACG2LED, DML DUAX3RCG2LED

Chromed Plastic Light Bezels
Add that "finished" chrome look to your round and oval lights!
Offered in two styles: plain or with visor. Sold individually.

2" Round Plain	DML DUALB2	4" Round Plain	DML DUALB4
2" Round with Visor	DML DUAVLB2	4" Round with Visor	DML DUAVLB4
2.5" Round Plain	DML DUALB25	6" Oval Plain	DML DUALB6
2.5" Round with Visor	DML DUAVLB25	6" Oval with Visor	DML DUAVLB6

Continuous Wiring Harness

Bulk wiring harness by the roll.

2 Prong. Plug spacing 6". 100' roll equals 200 plugs. DML DUA0100

2 Prong. Plug spacing 12". 100' roll equals 100 plugs. DML DUA0112

2010+ CORONADO ACCESSORIES

CORONADO 2010+ EXTENDED OEM SUNVISOR

A 17" stainless steel sunvisor utilizing OEM lights. Uses all existing OEM hardware and mounting brackets.

CORONADO EXTENDED OEM SUNVISOR
ABP FL524

CORONADO 2010+ BUG DEFLECTOR

Mounts behind grille bezel. Drilling of mounting holes through hood required. All mounting hardware supplied.

***GUARANTEED NOT TO BREAK!**

CORONADO BUG DEFLECTOR	
2010+	ABP FL349
SD 2013+	ABP FL516

2010+ CORONADO FENDER GUARDS

Includes hardware. Sold in pairs.

CORONADO FENDER GUARDS	
Headlight Surround - Set Forward Axle Only	ABP FL350
Under Headlight - Set Forward Axle	ABP FL351
Under Headlight - Set Back Axle	ABP FL364

2010+ CORONADO SFA EXTENDER SKIRT

Lights, hardware and harness supplied. Sold in pairs.

CORONADO SFA EXTENDER SKIRT	
21″ Long - 1 Light	ABP FL366
25.75″ Long - 2 Lights	ABP FL396

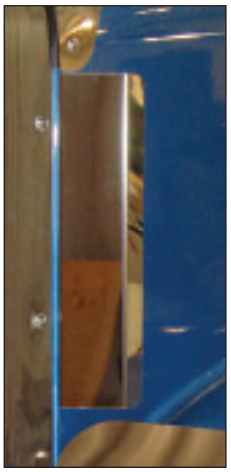

2010+ CORONADO SFA GRILLE DEFLECTOR

Two lengths available. Mount behind grille bezel on paint. Drilling of hood required. Hardware supplied. Sold in pairs.

***ABP FL353 - Not to be used with headlight surround fender guards.

CORONADO SFA GRILLE DEFLECTOR	
Long - 20″	ABP FL353
Short - 15″	ABP FL352

2010+ CORONADO DOOR HANDLE TRIM

Applied using 3M two-sided tape. Sold in pairs.

CORONADO DOOR HANDLE TRIM
ABP FL355

See Next Page For Additional 2010+ Coronado Accessories

2010+ CORONADO BUNK VENT TRIM

Applied using 3M two-sided tape. Sold in pairs.

CORONADO BUNK VENT TRIM
ABP FL356

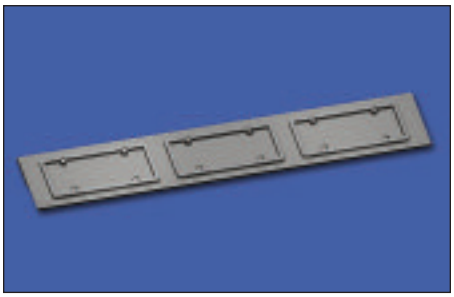

2010+ CORONADO TRIPPLE LICENSE PLATE SWING PLATE

Holds 3 plates. Hardware included. Sold individually.

Designed to fit the following OEM bumpers:

A21-28236-004/005/006/007/008/009/010/011
A21-28238-004/005/006/007
A21-28237-004/005/006/007
A21-27731-002/003/006/007

2010+ CORONADO TRIPPLE LICENSE PLATE SWING PLATE
ABP FL395

2010+ UNDER WINDOW ACCENT TRIM

Attaches using existing hardware. Sold in pairs.

CORONADO UNDER WINDOW ACCENT TRIM
ABP FL358

2010+ CORONADO DOOR TOP CAP

Attaches using supplied 3M two-sided tape. Sold in pairs.

CORONADO DOOR TOP CAP
ABP FL515

2010+ CORONADO REAR FRAME COVER

Attaches using supplied hardware. Sold in pairs.

CORONADO REAR FRAME COVER	
Plain	ABP FL359
With Freightliner Logo Cutout	ABP FL360
With Coronado Logo Cutout	ABP FL361

PRE 2010 CORONADO ACCESSORIES

PRE-2006 COLUMBIA, CORONADO AND CENTURY CLASS SUNVISOR EXTENSION STRIP
A 3" wide extension of the OEM composite sunvisor. Attaches using supplied 3M two-sided tape and bolts.

2006 + COLUMBIA SUNVISOR EXTENSION STRIP
A 3" wide extension of the OEM composite sunvisor. Attaches using supplied 3M two-sided tape and bolts.

PRE-2006 COLUMBIA, CORONADO AND CENTURY CLASS SUNVISOR EXTENSION STRIP
ABP FL079
2006+ COLUMBIA SUNVISOR EXTENSION STRIP
ABP FL312

CORONADO SIDE SUNVISOR TRIM
Attaches using supplied 3M two-sided tape. Sold in pairs.

CORONADO SIDE SUNVISOR TRIM
ABP FL104

CORONADO BUG DEFLECTOR
Mounts behind grill bezel. Drilling of mounting holes through fiberglass hood required. All mounting hardware supplied.

GUARANTEED NOT TO BREAK!

CORONADO BUG DEFLECTOR
ABP FL098

CORONADO FENDER GUARDS
Below Headlight Fender Guards for Coronado model. Includes hardware. Sold in pairs.

CORONADO FENDER GUARDS
ABP FL099

See Next Page For Additional Pre 2010 Coronado Accessories

CORONADO LOWER GRILLE TRIM

Add that finished look to your Coronado grille. Protects against stone chips. Mounts using supplied hardware. Sold individually.

CORONADO LOWER GRILLE TRIM
ABP FL100

COLUMBIA, CORONADO AND CENTURY CLASS DOOR WINDOW DEFLECTOR

Attaches using 3M two-sided tape, no hardware required. Sold in pairs.

COLUMBIA, CORONADO AND CENTURY CLASS DOOR WINDOW DEFLECTOR
ABP FL024A

CORONADO GRILLE DEFLECTOR

Mounts behind grille bezel on paint. Drilling of hood required. Hardware supplied. Sold in pairs.

CORONADO GRILLE DEFLECTOR
ABP FL101

COLUMBIA AND CENTURY CLASS WINDOW TRIM

Fits 25-1/2" x 15-1/4" window. Attaches using supplied 3M two-sided tape. Sold individually.

COLUMBIA AND CENTURY CLASS WINDOW TRIM
ABP FL091

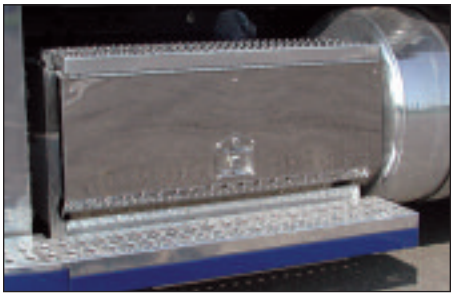

CORONADO BATTERY BOX COVERS

36″ battery box covers for Coronado tool boxes. Attaches using supplied hardware and adhesive. Sold in pairs.

CORONADO BATTERY BOX COVERS
ABP FL274

PRE 2010 CORONADO FACTORY REPLACEMENT PANELS

PRE 2010 CORONADO OEM REPLACEMENT PANELS

These panels are replacement panels only. Lights hardware and harness are NOT included.

Aftermarket Part #	OEM Part #	Panel	Driver/Passenger
ABP FL369	A22-61250-000	58” Sleeper	Driver
ABP FL370	A22-61250-001	58” Sleeper	Passenger
ABP FL371	A22-53463-000	Door	Driver
ABP FL372	A22-53463-001	Door	Passenger
ABP FL373	A22-53462-000	Cowl	Driver
ABP FL374	A22-53462-001	Cowl	Passenger
ABP FL375	A22-60421-000	70” Sleeper	Driver
ABP FL376	A22-60421-001	70” Sleeper	Passenger
ABP FL377	A22-58316-000	Hood	Driver
ABP FL378	A22-58316-001	Hood	Passenger

CASCADIA ACCESSORIES

ABP FL327	**CASCADIA FENDER & BUMPER TRIM** Applied using 3M two-sided tape and hardware. Kit contains 4 trim pieces.
ABP FL330	**CASCADIA BUG DEFLECTOR** Mounts behind grille bezel. Drilling of mounting holes through hood required. All mounting hardware supplied. ***GUARANTEED NOT TO BREAK!***
ABP FL333 ABP FL514 - Outer Ring Only	**CASCADIA BUNK WINDOW TRIM** Kit consists of an inner and outer trim ring. Attaches using supplied 3M two-sided tape.
ABP FL331	**CASCADIA HOOD LATCH GUARD** A stainless steel accent with an etched logo to highlight and protect the area around the hood latch. Hardware included. Sold in pairs.
ABP FL328	**CASCADIA WHEEL FENDER TRIM KIT** 6 piece kit. Attaches using 3M two-sided tape.
ABP FL334	**CASCADIA SIGNAL LIGHT TRIM** Sold in pairs. Attaches using 3M two-sided tape.
ABP FL329 - 1 Plate ABP FL335 - 2 Plates	**CASCADIA LICENSE PLATE HOLDERS** Attaches to the bumper using supplied hardware. Drilling required.

See Next Page For Additional Cascadia Accessories

CASCADIA DOOR WINDOW SHADE

Attaches using supplied 3M two-sided tape. Optional hardware supplied.

CASCADIA DOOR WINDOW SHADE
ABP FL342

CASCADIA HOOD TRIM

Attaches to the hood using supplied 3M two-sided tape. Sold in pairs.

CASCADIA HOOD TRIM
ABP FL336

EVOLUTION FAIRING STEP SCUFF PANELS

This 4-PC set includes top kick panels and bottom step panels. Attaches to the fairings using supplied 3M two-sided tape and hardware. Sold in sets.

EVOLUTION FAIRING STEP SCUFF PANELS
ABP FL517

CASCADIA REAR BUNK ACCENT PANEL WITH LOGO CUT-OUT

Applies using supplied 3M two-sided tape.

CASCADIA REAR BUNK ACCENT PANEL WITH LOGO CUT-OUT
ABP FL332

CASCADIA BATTERY BOX/TOOL BOX COVERS & STEP TRIM

Attaches using supplied hardware and adhesive.

CASCADIA BATTERY BOX/TOOL BOX COVERS & STEP TRIM	
Driver Side (BB)	ABP FL317
Driver Side With **Etched** Logo (BB)	ABP FL318
Passenger Side (TB)	ABP FL319
(BB/TB) with step trim	ABP FL321
(BB with **Etched** Logo/TB) with step trim	ABP FL322
Step trim	ABP FL320

CASCADIA CAB/SLEEPER/EXTENDER SKIRT KITS

Evolution model skirts also available. 3" wide. Attaches using supplied hardware.

CASCADIA CAB/60" SLEEPER/EXTENDER SKIRT KITS	
With X2AG2 LED Lights (16)	ABP FL346
With X2ACG2 LED Lights (16)	ABP FL347
Plain	ABP FL348

CASCADIA **EVOLUTION** MODEL CAB/60" SLEEPER/EXTENDER SKIRT KITS	
With X2AG2 LED Lights (14)	ABP FL521
With X2ACG2 LED Lights (14)	ABP FL522
Plain	ABP FL523

CASCADIA CAB/72" SLEEPER/EXTENDER SKIRT KITS	
With X2AG2 LED Lights (16)	ABP FL324
With X2ACG2 LED Lights (16)	ABP FL325
Plain	ABP FL326

CASCADIA CAB/72" SLEEPER/EXTENDER SKIRT KITS **WITH FAIRINGS**	
With X2AG2 LED Lights (16)	ABP FL337
With X2ACG2 LED Lights (16)	ABP FL338
Plain	ABP FL339

CASCADIA **EVOLUTION** CAB/72" SLEEPER/EXTENDER SKIRT KITS	
With X2AG2 LED Lights (16)	ABP FL518
With X2ACG2 LED Lights (16)	ABP FL519
Plain	ABP FL520

COLUMBIA ACCESSORIES

ABP FL282 - Raised Roof With Roof Window ABP FL283 - Raised Roof Without Roof Window ABP FL281 - Mid Roof ABP FL284 - Mid Roof XT	**COLUMBIA RAISED/MID ROOF SUNVISOR** Stainless steel sunvisor for "raised roof" and "mid roof" Columbia models. Drilling of roof required. All hardware and mounting brackets supplied.
ABP FL075	**COLUMBIA FENDER GUARDS** Includes hardware. Sold in pairs.
ABP FL 083	**COLUMBIA BUG DEFLECTOR** Mounts behind grille bezel. Drilling of mounting holes through hood required. All mounting hardware supplied. ***GUARANTEED NOT TO BREAK!***
ABP FL024A	**COLUMBIA, CORONADO AND CENTURY CLASS DOOR WINDOW DEFLECTOR** Attaches using 3M two-sided tape, no hardware required. Sold in pairs.
ABP FL314 - '06+ ABP FL076 - Pre '06	**COLUMBIA STORAGE DOOR TRIM** Attaches using supplied 3M two-sided tape. Sold individually.
ABP FL091	**COLUMBIA AND CENTURY CLASS WINDOW TRIM** Fits 25-1/2" x 15-1/4" window. Attaches using supplied 3M two-sided tape. Sold individually.
ABP FL084	**COLUMBIA LICENSE PLATE HOLDER** Adapts to factory license plate holes in bumper. Holds 3 license plates. Drilling of bumper required. Hardware supplied.
ABP FL085	**COLUMBIA HOOD AND CAB ACCENT TRIM** A 6-piece set of trim strips that adhere using supplied 3M two-sided tape to hood and cab. Sold in sets or pairs.
ABP FL088	**COLUMBIA AND CORONADO DOOR HANDLE AND LOGO TRIM** Attaches using supplied 3M two-sided tape. Sold in pairs.
ABP FL086	**COLUMBIA WHEEL WELL TRIM** Attaches using supplied 3M two-sided tape. Sold in pairs.

See The Next 2 Pages For Additional Columbia Accessories

PRE-2006 COLUMBIA, CORONADO AND CENTURY CLASS SUNVISOR EXTENSION STRIP

A 3" wide extension of the OEM composite sunvisor. Attaches using supplied 3M two-sided tape and bolts.

2006 + COLUMBIA SUNVISOR EXTENSION STRIP

A 3" wide extension of the OEM composite sunvisor. Attaches using supplied 3M two-sided tape and bolts.

PRE-2006 COLUMBIA, CORONADO AND CENTURY CLASS SUNVISOR EXTENSION STRIP
ABP FL079
2006+ COLUMBIA SUNVISOR EXTENSION STRIP
ABP FL312

PRE-2006 COLUMBIA AND CENTURY CLASS SUNVISOR INSERTS

3-piece set attaches using supplied 3M two-sided tape and hardware.

PRE-2006 COLUMBIA AND CENTURY CLASS SUNVISOR INSERTS	
Full Kit	ABP FL062
Sides Only	ABP FL240
Visor Only	ABP FL246

2006 + COLUMBIA VENT TRIM

Attaches using supplied 3M two-sided tape. Sold individually.

2006+ COLUMBIA VENT TRIM
ABP FL313

COLUMBIA MARKER LIGHT TRIM

Attaches using supplied 3M two-sided tape. Sold in pairs.

PRE 2006 COLUMBIA MARKER LIGHT TRIM
ABP FL087
2006+ COLUMBIA MARKER LIGHT TRIM
ABP FL315

COLUMBIA GRILLE FILLER PANEL

Replaces OEM mesh panel. No mounting hardware required.

COLUMBIA GRILLE FILLER PANEL
ABP FL082

COLUMBIA, CORONADO AND CENTURY CLASS DOOR WINDOW DEFLECTOR

Attaches using 3M two-sided tape, no hardware required. Sold in pairs.

COLUMBIA, CORONADO AND CENTURY CLASS DOOR WINDOW DEFLECTOR
ABP FL024A

COLUMBIA CAB, SLEEPER, EXTENDER SKIRTS
Cannot be used with chassis fairings

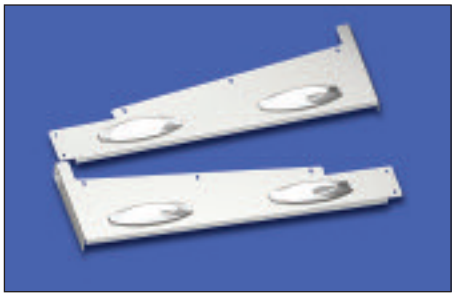

COLUMBIA EXTENDER PANELS
These extender skirts are designed to continue the sleeper skirts to the end of the OEM sleeper extender. Hardware, harnesses and lights supplied. Sold in pairs.

Cannot be used with chassis fairings

26" COLUMBIA EXTENDER PANEL	
X2AG2 LED lights (2)	ABP FL266
X2ACG2 LED lights, clear lens (2)	ABP FL270
Plain	ABP FL262
21" COLUMBIA EXTENDER PANEL	
X2AG2 LED light (1)	ABP FL285
X2ACG2 LED light, clear lens (1)	ABP FL286
Plain	ABP FL287

COLUMBIA REAR/SIDE MOUNTED - CAB/SLEEPER/EXTENDER KITS
Kits include lights, wiring harness and mounting hardware. 3-1/2" skirts are available for rear mount or side mount exhaust configurations.
Cannot be used with chassis fairings

	CAB SKIRT	SLEEPER SKIRT	EXTENDER	ABP KIT #
70" COLUMBIA REAR MOUNT EXHAUST KIT (26" EXTENDERS)				
X2AG2 LED lights (9)	ABP FL264	ABP FL265	ABP FL266	**ABP FL267**
X2ACG2 LED lights, clear lens (9)	ABP FL268	ABP FL269	ABP FL270	**ABP FL271**
Plain	ABP FL260	ABP FL261	ABP FL262	**ABP FL263**
70" COLUMBIA REAR MOUNT EXHAUST KIT (21" EXTENDERS)				
X2AG2 LED lights (8)	ABP FL264	ABP FL265	ABP FL285	**ABP FL288**
X2ACG2 LED lights, clear lens (8)	ABP FL268	ABP FL269	ABP FL286	**ABP FL289**
Plain	ABP FL260	ABP FL261	ABP FL287	**ABP FL290**
70" COLUMBIA SIDE MOUNT EXHAUST KIT (26" EXTENDERS)				
X2AG2 LED lights (9)	ABP FL264	ABP FL275	ABP FL266	**ABP FL276**
X2ACG2 LED lights, clear lens (9)	ABP FL268	ABP FL277	ABP FL270	**ABP FL278**
Plain	ABP FL260	ABP FL279	ABP FL262	**ABP FL280**
70" COLUMBIA SIDE MOUNT EXHAUST KIT (21" EXTENDERS)				
X2AG2 LED lights (8)	ABP FL264	ABP FL275	ABP FL285	**ABP FL291**
X2ACG2 LED lights, clear lens (8)	ABP FL268	ABP FL277	ABP FL286	**ABP FL292**
Plain	ABP FL260	ABP FL279	ABP FL287	**ABP FL293**

COLUMBIA MODEL CAB SKIRTS W/O FAIRINGS
3-1/2" wide Columbia cab skirts mount easily using supplied hardware. Cab skirts are set back and don't interfere with fuel filling. Sold in pairs.

Cannot be used with chassis fairings

COLUMBIA CAB SKIRTS W/O FAIRINGS	
X2AG2 LED lights (3)	ABP FL264
X2ACG2 LED lights, clear lens (3)	ABP FL268
Plain	ABP FL260

70" COLUMBIA REAR MOUNT EXHAUST SLEEPER SKIRTS
Attaches using supplied hardware. Sold in pairs. Lights and harness included.
Cannot be used with chassis fairings

70" COLUMBIA SIDE MOUNT EXHAUST SLEEPER SKIRTS
Attaches using supplied hardware. Sold in pairs. Lights and harness included.
Cannot be used with chassis fairings

FOR REAR MOUNT EXHAUST	
X2AG2 LED lights (4)	ABP FL265
X2ACG2 LED lights, clear lens (4)	ABP FL269
Plain	ABP FL261
FOR SIDE MOUNT EXHAUST	
X2AG2 LED lights (4)	ABP FL275
X2ACG2 LED lights, clear lens (4)	ABP FL277
Plain	ABP FL279

CLASSIC/XL ACCESSORIES

ABP FL120 - X2AG2 LED lights (5)
ABP FL224 - X2ACG2 LED Lights, clear lens (5)
ABP FL117 - 2" Round lights (5)
ABP FL118 - 2" Round lights (10)
ABP FL124 - 2" Starburst LED lights (10)
ABP FL122 - 2" Light Holes, no lights (10)
ABP FL116 - Using Factory lights
ABP FL367 - Plain

CLASSIC RAISED ROOF, FLD-120 SUNVISOR
16" Deep stainless steel sunvisor for Classic and FLD-120 models. Designed to replace OEM composite visor. All hardware included. Light Hole models include mounting hardware and harnesses only.
FOR RAISED ROOF MODELS.

More sunvisors available on the following page

ABP FL026A

CLASSIC, CLASSIC XL HOOD & SEVERE DUTY BUG DEFLECTOR
Classic Hood Bug Deflector fits both Classic and Classic XL models. Mounts behind grille bezel. Drilling of mounting holes through hood required. All mounting hardware supplied.
GUARANTEED NOT TO BREAK!

ABP FL112 - With logo cutout
ABP FL002A - Plain

CLASSIC SHORT HOOD HEADLIGHT FENDER GUARDS
Below Headlight Fender Guards for Classic Short Hood models. Available plain or with logo cutout. Includes hardware. Sold in pairs.

ABP FL026B
ABP FL026C - Classic XL

CLASSIC & CLASSIC XL GRILLE DEFLECTORS
Mounts behind grille bezel on paint. Drilling of hood required. Hardware supplied. Sold in pairs.

See The Next 5 Pages For Additional Classic/XL Accessories

ABP FL089 shown.

CLASSIC EXTRA DEEP SUNVISOR

Available in two different depths, 11" and 12½", and louvered or non-louvered versions. Designed to replace OEM stainless steel sunvisor. Mounts to existing factory roof brackets (part # FL 22-38826-000 four required). Both 11" and 12½" visors slope deeper than factory stainless visors, with the 12½" visor tilting down toward the hood more than the 11" visor. No drilling required, all hardware supplied.

CLASSIC EXTRA DEEP SUNVISOR	
11" Deep With Louvers	ABP FL020
11" Deep Without Louvers	ABP FL019
12½" Deep With Louvers	ABP FL090
12½" Deep Without Louvers	ABP FL089

ABP FL074 shown.

CLASSIC SUNVISOR EXTENSION STRIPS

Available in four different widths. Attaches using supplied hardware, drilling required.

CLASSIC SUNVISOR EXTENSION STRIPS	
1" Sunvisor Extension Strip	ABP FL071
2" Sunvisor Extension Strip	ABP FL072
3" Sunvisor Extension Strip	ABP FL073
4" Sunvisor Extension Strip	ABP FL074

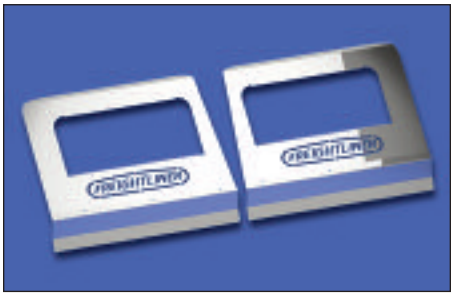

CLASSIC XL AROUND HEADLIGHT FENDER GUARD

Around Headlight Fender Guards for Classic XL models. Includes hardware. Sold in pairs.

CLASSIC XL AROUND HEADLIGHT FENDER GUARDS	
With logo cutout	ABP FL115

CLASSIC SHORT HOOD AROUND HEADLIGHT FENDER GUARD

Around Headlight Fender Guard for Classic Short Hood models. Available plain or with logo cutout. Includes hardware. Sold in pairs.

CLASSIC SHORT HOOD AROUND HEADLIGHT FENDER GUARDS	
With logo cutout	ABP FL114
Plain	ABP FL002C

CLASSIC XL BELOW HEADLIGHT FENDER GUARD

Below Headlight Fender Guards for Classic XL models. Available plain or with logo cutout. Includes hardware. Sold in pairs.

CLASSIC XL BELOW HEADLIGHT FENDER GUARDS	
With logo cutout	ABP FL113
Plain	ABP FL002B

CLASSIC/XL, FLD-112/120 DOOR WINDOW SHADE

Attaches using supplied hardware. Drilling of door is required.

CLASSIC/XL, FLD-112/120 DOOR WINDOW SHADE
ABP FL344

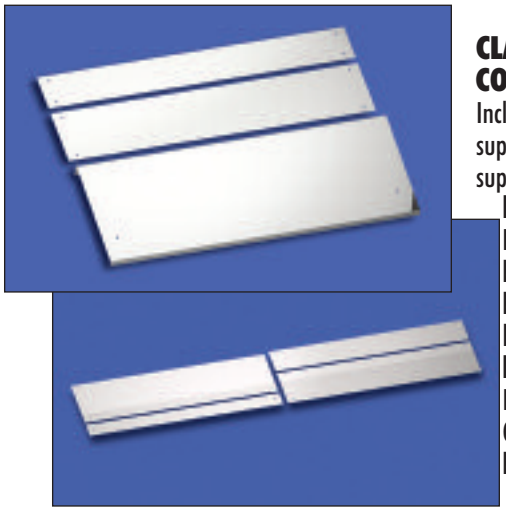

CLASSIC BATTERY BOX/TOOL BOX COVER 2007+

Includes 3 panels that are fastened by bolts and supplied silicone adhesive. All hardware supplied.

BATTERY TOOL BOX PANELS

Battery tool box panels for standard tool boxes. Includes 4 panels that are fastened by bolts and supplied silicone adhesive. All hardware supplied.

EXTRA LONG TOOL BOX PANELS

For Classic models with extra long tool boxes. Consists of two panels that are fastened by bolts. All hardware supplied. Sold in pairs.

CLASSIC BATTERY BOX/TOOL BOX COVER 2007+	
31″ Long	ABP FL311
BATTERY TOOL BOX PANELS	
31″ Long	ABP FL030
EXTRA LONG TOOL BOX PANELS	
43″ Long	ABP FL030LB

CLASSIC REAR SLEEPER SKIRT

Mounts to lower rear of sleeper. Drilling required. Adjustable to accommodate inconsistencies in sleeper widths. Sold individually. Hardware supplied.

CLASSIC REAR SLEEPER SKIRT
ABP FL217

CLASSIC FRESH AIR INTAKE SHROUD

Designed to help prevent dust and particles entering cab through fresh air intake on hood. Attaches using 3M two sided tape. Sold individually.

CLASSIC FRESH AIR INTAKE SHROUD
ABP FL239

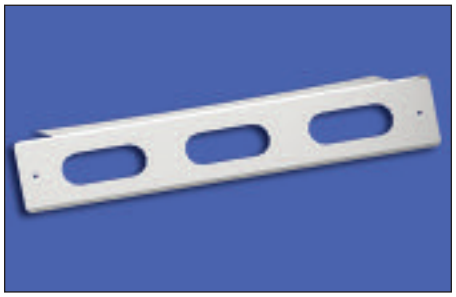

CLASSIC REAR FRAME COVER

Add that stainless steel look to the rear frame. Available plain or with light holes. Fastens using supplied hardware. Some drilling required. Sold individually.

CLASSIC REAR FRAME COVER	
With 3 Oval light holes	ABP FL295
Plain	ABP FL296

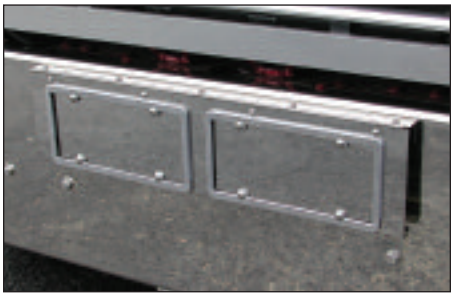

CLASSIC MODEL BUMPER FACE AND UNDER BUMPER LICENSE PLATE HOLDERS

Bumper Face License Plate Holder attaches to face of bumper using existing bumper bolts. Under Bumper License Plate Holder (not shown) is hinged and hangs under bumper. Hinge and hardware supplied.

BUMPER FACE LICENSE PLATE HOLDERS	
1 Plate	ABP FL065
2 Plate	ABP FL066
3 Plate	ABP FL067
UNDER BUMPER LICENSE PLATE HOLDERS	
2 Plate	ABP FL010
3 Plate	ABP FL011
4 Plate	ABP FL012

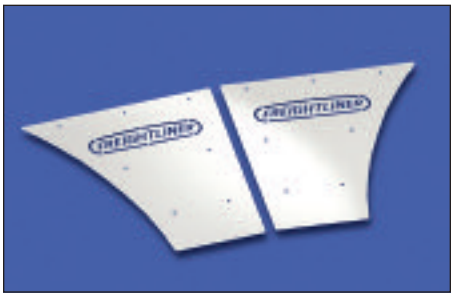

LOWER HOOD PANEL BEHIND FENDER

For Classic and Classic XL models. Replaces factory panels. Bolts onto hood directly behind fender. Hardware supplied. Sold individually or in pairs, check side panel description.

LOWER HOOD PANEL BEHIND FENDER	
Classic Plain (pair)	ABP FL032
Classic (driver side)	ABP FL032D
Classic (passenger)	ABP FL032P
Classic XL Plain	ABP FL 032A
Classic XL (pair) with logo	ABP FL111

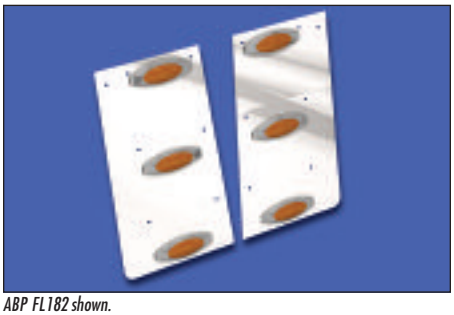

ABP FL182 shown.

CLASSIC COWL PANELS

Designed to replace factory cowl panel. Available in different light configurations. Mounts to underside of cab using existing factory lower bracket. Drilling of underside of cab required. Lights and harnesses included. Uses existing mounting hardware. Sold in pairs. 2" round chrome bezels not included.

CLASSIC COWL PANELS	
2" Round lights (3)	ABP FL207
With X2AG2 lights (3)	ABP FL180
With X2AG2 LED lights (3)	ABP FL182
With X3AG2 lights (3)	ABP FL213
Classic Cowl, blank	ABP FL221

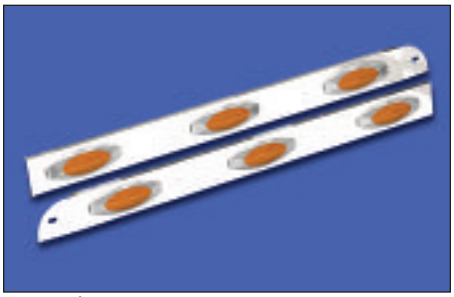

ABP FL183 shown.

3" CLASSIC CAB SKIRTS

Plain and 2" Round skirts are 3-1/2" wide. Easily mounts to underside of cab. Hardware, harnesses and lights supplied. Light Hole models include mounting hardware and harnesses only. Sold in pairs.
2" Round chrome bezels not included.

Must be purchased with Cowl Panels listed above

3" CLASSIC CAB SKIRTS	
For use with ABP FL 207, 2" Round lights (6)	ABP FL184
For use with ABP FL 180, X2AG2 lights (3)	ABP FL181
For use with ABP FL 182, X2AG2 LED lights (3)	ABP FL183
For use with ABP FL213, X3AG2 lights (6)	ABP FL215
For use with ABP FL 221, plain no lights	ABP FL222

70" SLEEPER SKIRTS

Sleeper skirts to be used with extender. Plain and 2" Round skirts are 3-1/2" wide. X2A, X3A skirts are 3" wide. Available plain or with lights. Hardware supplied. Some drilling may be required. Sold in pairs.
2" Round chrome bezels not included.

70" SLEEPER SKIRT	
70" With 2" Round lights (9)	ABP FL170
70" With 2" Round Starburst LED lights (9)	ABP FL172
70" With X2AG2 lights (4)	ABP FL174
70" With X2AG2 LED lights (4)	ABP FL176
70" With X2ACG2 LED lights, clear lens (4)	ABP FL232
70" With X3AG2 lights (9)	ABP FL209
70" With X3AG2 LED lights (9)	ABP FL210
70" With X3ACG2 LED lights, clear lens (9)	ABP FL231
70" Plain	ABP FL219

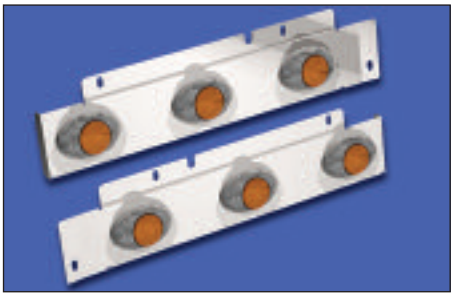

18" & 25" CLASSIC EXTENDER PANELS

Available with X2AG2 LED, 2" Round, X3AG2 Clear and Amber lens & plain (no lights). These extender skirts are designed to continue the sleeper skirts to the end of the factory sleeper extender. Hardware, harnesses and lights supplied. Sold in pairs.

18" CLASSIC EXTENDER PANEL	
18" With X2AG2 lights (1)	ABP FL200
18" With X2AG2 LED lights (1)	ABP FL201
18" With X2ACG2 LED lights, clear lens (1)	ABP FL235
18" With X3AG2 lights (3)	ABP FL204
18" With X3AG2 LED lights (3)	ABP FL205
18" With X3ACG2 LED lights, clear lens (3)	ABP FL236
18" Plain no lights	ABP FL199
25" CLASSIC EXTENDER PANEL	
25" With X2AG2 LED lights (2)	ABP FL177
25" Plain no lights	ABP FL220

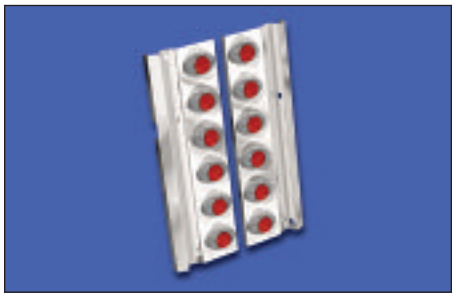

DONALDSON 13" REAR AIR CLEANER LIGHT BARS

For Donaldson 13" air cleaner. Mounts to air cleaner strap bolts. No drilling required. Lights, harnesses and bezels included. **Bezels not included with 2" Round lights**. Sold in pairs.

DONALDSON REAR AIR CLEANER LIGHT BARS	
With 2" Round light holes (6)	ABP FL027R
With 2" Round lights (6)	ABP FL249
With 2" Round Starburst LED lights (6)	ABP FL250
With X3RG2 lights (6)	ABP FL251
With X3RG2 LED lights (6)	ABP FL252
With X3RCG2 LED lights, clear lens (6)	ABP FL253

FRONT AIR CLEANER LIGHT BARS

For 13" air cleaners. Mounts to existing holes in brackets. Lights, harnesses and bezels included unless stated otherwise. Sold in pairs.

2" Round Bezels not included.

FRONT AIR CLEANER LIGHT BARS	
With 2" Round lights (7)	ABP FL258
With 2" Round lights holes (7)	ABP FL027
With 2" Round Starburst LED lights (7)	ABP FL254
With X3AG2 lights (6)	ABP FL154
With X3AG2 LED lights (6)	ABP FL155
With X3ACG2 LED lights, clear lens (6)	ABP FL225

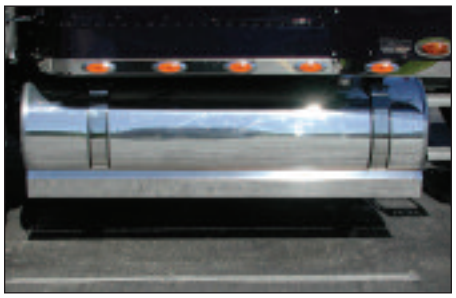

FUEL TANK SKIRTS

Mounts to tank straps. Ends are welded and polished. All brackets and hardware included. Note: extra brackets available as ABP FL 0967BK. **Sold individually.**

FUEL TANK SKIRTS	
82" Long Plain	ABP FL096
87" Long Plain	ABP FL097

GLOVE BOX COVER

Glove box cover for Classic, FLD-120, FLD-112 models. Mounts using supplied 3M two-sided tape.

GLOVE BOX COVER
ABP FL021

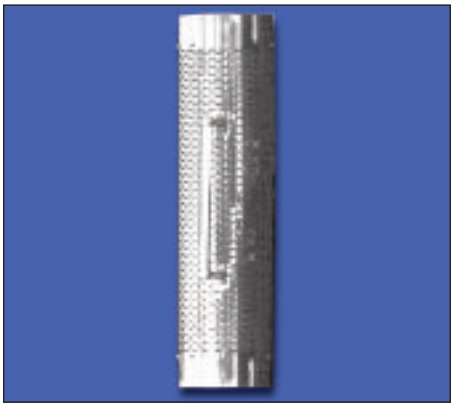

EXTENDED EXHAUST SHROUD

Replace OEM perforated shields on standard 5" exhaust only. 58 1/2" tall. Shroud is extended to cover factory exhaust brackets. No drilling required, attaches to existing brackets. Sold in pairs. Extra hardware and additional brackets supplied. Grab handle holes provided.

EXTENDED EXHAUST SHROUD
ABP FL218

DOOR WINDOW DEFLECTOR

Attaches using 3M two-sided tape, no hardware required. Fits FLD-120, FLD-112, and Classic models. Sold in pairs.

DOOR WINDOW DEFLECTOR
ABP FL024

CLASSIC FUSE PANEL COVER

Available plain or with logo cutout. Mounts using supplied silicone. Sold individually.

CLASSIC FUSE PANEL COVER	
Plain	ABP FL108
With logo cutout	ABP FL107

CLASSIC SHIFT BASE COVER

Available plain or with logo cutout. Mounts using existing hardware. Sold individually.

CLASSIC SHIFT BASE COVER	
Plain	ABP FL110
With logo cutout	ABP FL109

CENTURY CLASS/SEVERE DUTY/FLD-112/FLD-120 & M2 BUSINESS CLASS ACCESSORIES

PRE-2006 COLUMBIA, CORONADO AND CENTURY CLASS SUNVISOR EXTENSION STRIP

A 3" wide extension of the OEM composite sunvisor. Attaches using supplied 3M two-sided tape and bolts.

2006 + COLUMBIA SUNVISOR EXTENSION STRIP

A 3" wide extension of the OEM composite sunvisor. Attaches using supplied 3M two-sided tape and bolts.

PRE-2006 COLUMBIA, CORONADO AND CENTURY CLASS SUNVISOR EXTENSION STRIP
ABP FL079
2006+ COLUMBIA SUNVISOR EXTENSION STRIP
ABP FL312

PRE-2005 COLUMBIA AND CENTURY CLASS SUNVISOR INSERTS

3-piece set attaches using supplied 3M two-sided tape and hardware.

PRE-2005 COLUMBIA AND CENTURY CLASS SUNVISOR INSERTS	
Full Kit	ABPFL062
Sides Only	ABPFL240
Visor Only	ABPFL246

CLASSIC RAISED ROOF, FLD-120 SUNVISOR

16" Deep stainless steel sunvisor for Classic and FLD-120 models. Designed to replace OEM composite visor. All hardware included. Light Hole models include mounting hardware and harnesses only.

FOR RAISED ROOF MODELS.

CLASSIC RAISED ROOF, FLD-120 SUNVISOR	
X2AG2 LED lights (5)	ABP FL120
X2ACG2 LED lights, clear lens (5)	ABP FL224
2" Round lights (5)	ABP FL117
2" Round lights (10)	ABP FL118
2" Round LED lights (10)	ABP FL124
2" Round light holes (10)	ABP FL122
Using Factory lights	ABP FL116
Plain	ABP FL367

2003+ M2 100, 104, 106, 112, 114 & 116 BUSINESS CLASS SUNVISOR

A stainless steel sunvisor for M2 models. Drilling of roof required.

PRE 2003 BUSINESS CLASS STAINLESS STEEL SUNVISORS

Stainless steel sunvisor for "standard roof" and "raised roof" Business Class models FL-50-60-70-80-106-112.

****All hardware and mounting brackets supplied.**

2003+ M2 100, 104, 106, 112, 114 & 116 BUSINESS CLASS SUNVISOR	
Plain	ABP FL105
W/OEM Composite Sunvisor NEW!	ABP FL294
PRE 2003 BUSINESS CLASS STAINLESS STEEL SUNVISORS	
Standard Roof	ABP FL015
Raised Roof	ABP FL015R

CENTURY CLASS BUG DEFLECTOR

ABP FL060 mounts behind grab handle. ABP FL272 mounts behind grille bezel. Drilling of fiberglass hood is required. All mounting hardware supplied.

***GUARANTEED NOT TO BREAK!**

CENTURY CLASS BUG DEFLECTOR	
1997-2004 Plain	ABP FL060
2005 + Plain	ABP FL272

FLD-112/120 BUG DEFLECTOR

Mounts behind grab handle. Drilling of fiberglass hood is required. All mounting hardware supplied.

***GUARANTEED NOT TO BREAK!**

FLD-112/120 BUG DEFLECTOR
ABP FL037

M2 100, 106 & 112 BUSINESS CLASS BUG DEFLECTORS

Mounts behind grille bezel. Drilling of mounting holes through fiberglass hood required. All mounting hardware supplied.

***GUARANTEED NOT TO BREAK!**

M2 100, 106 BUSINESS CLASS BUG DEFLECTOR	
Plain, M2 100/106	ABP FL103
M2 112 BUSINESS CLASS BUG DEFLECTOR	
Plain, M2 112	ABP FL256

FL 114SD BUG DEFLECTOR

Mounts behind grille bezel. Drilling of mounting holes through fiberglass hood required. All mounting hardware supplied.

***GUARANTEED NOT TO BREAK!**

FL 114SD BUG DEFLECTOR
ABP FL398

See The Next 3 Pages For Additional Accessories

FLD-112/120, CLASSIC/XL DOOR WINDOW SHADE

Attaches using supplied hardware. Drilling of door is required.

FLD-112/120, CLASSIC/XL DOOR WINDOW SHADE
ABP FL344

M2 106/112 CHROME INTAKE GRILLE

Replaces OEM grilles. Uses existing hardware.

M2 106/112 CHROME INTAKE GRILLE	
M2 106 Models	ABP FL340
M2 112 Models	ABP FL341

SEVERE DUTY BELOW HEADLIGHT FENDER GUARD

Below Headlight Fender Guards for Severe Duty models. Includes hardware. Sold in pairs.

SEVERE DUTY BELOW HEADLIGHT FENDER GUARDS
ABP FL002E

FLD-112/120 BELOW HEADLIGHT FENDER GUARDS

Includes hardware. Sold in pairs.

FLD-112/120 BELOW HEADLIGHT FENDER GUARDS
ABP FL001

FL 114SD SBA BELOW HEADLIGHT FENDER GUARDS

Includes hardware. Sold in pairs.

FL 114SD SBA BELOW HEADLIGHT FENDER GUARDS
ABP FL397

DOOR WINDOW DEFLECTOR

Attaches using 3M two-sided tape, no hardware required. **Fits FLD-120, FLD-112, and Classic models.** Sold in pairs.

DOOR WINDOW DEFLECTOR
ABP FL024

COLUMBIA, CORONADO AND CENTURY CLASS DOOR WINDOW DEFLECTOR

Attaches using 3M two-sided tape, no hardware required. Sold in pairs.

COLUMBIA, CORONADO AND CENTURY CLASS DOOR WINDOW DEFLECTOR
ABP FL024A

CENTURY CLASS GRILLE TRIM

3-piece grille trim includes grille deflectors and below grille trim. Drilling required. Hardware supplied.

CENTURY CLASS GRILLE TRIM
ABP FL026G

FLD-120 GRILLE DEFLECTORS

Mounts behind grille bezel on paint. Drilling of hood required. Hardware supplied. Sold in pairs.

FLD-120 GRILLE DEFLECTORS
ABP FL026D

CLASSIC, CLASSIC XL AND SEVERE DUTY GRILLE DEFLECTORS

Mounts behind grille bezel on paint. Drilling of hood required. Hardware supplied. Sold in pairs.

Classic, Plain ABP FL026B
Classic XL ABP FL026C
Severe Duty ABP FL026F

CENTURY CLASS LICENSE PLATE INSERT

Drilling of bumper required. Hardware supplied.

CENTURY CLASS LICENSE PLATE INSERT
ABP FL061

CENTURY CLASS BUMPER INSERTS

3-piece bumper inserts for Century class models. Panels are attached using screws. Drilling required, all hardware supplied.

CENTURY CLASS BUMPER INSERTS
ABP FL009B

FLD-112/120 BUMPER INSERTS

3-piece bumper inserts for FLD-120 and FLD-112 models. Panels fasten to bumper using 3M two-sided tape. Panels are pre-taped, no hardware required.

FLD-112/120 BUMPER INSERTS
ABP FL009

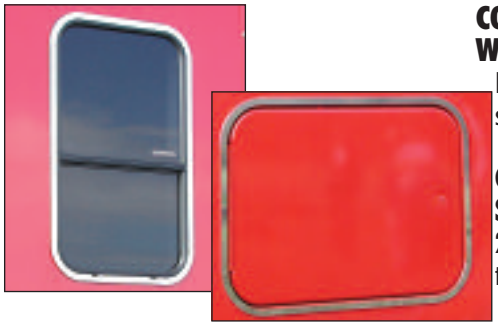

COLUMBIA AND CENTURY CLASS WINDOW TRIM

Fits 25-1/2" x 15-1/4" window. Attaches using supplied 3M two-sided tape. Sold individually.

COLUMBIA AND CENTURY CLASS STORAGE DOOR TRIM

24 1/2" x 17.69". Attaches using supplied 3M two-sided tape. Sold individually.

COLUMBIA AND CENTURY CLASS WINDOW TRIM
ABP FL091
COLUMBIA AND CENTURY CLASS STORAGE DOOR TRIM
ABP FL076

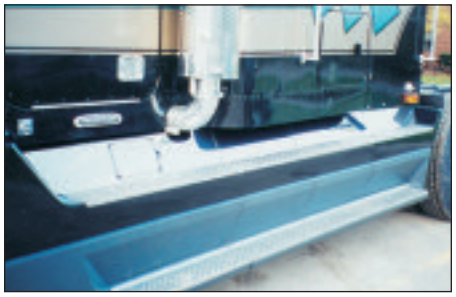

FLD-112/120 TOP FAIRING SCUFF PANELS

These panels are attached using 3M two-sided tape. Top edge of panels hook over top edge of fairing. No drilling or hardware required. Sold in pairs.

FLD-112/120 TOP FAIRING SCUFF PANELS	
Top Front Fairing Panels for FLD-120 models with rear mounted exhaust	ABP FL003B
Top Rear Fairing Panels	ABP FL004
Top Center Fairing Panel 39" long	ABP FL005A

GLOVE BOX COVER

Glove box cover for Classic, FLD-120, FLD-112 models. Mounts using supplied 3M two-sided tape.

GLOVE BOX COVER
ABP FL021

UNIVERSAL ACCESSORIES

HEADLIGHT VISORS

Add that finished look to your Freightliner headlight assemblies. Visor for four light headlight assembly mounts behind headlight bezel. Double headlight visor mounts to bezel. Both use existing hardware. Sold in pairs.

HEADLIGHT VISORS	
Single Headlight Visor	DML DUA014
Double Headlight Visor	DML DUA007

UNIVERSAL HOOD WING

Consists of an aluminum frame with stainless steel skin. Drilling of hood is required. 10-1/2" deep x 41" wide. Mounts to hood. All hardware supplied.

UNIVERSAL HOOD WING
DML DUA040

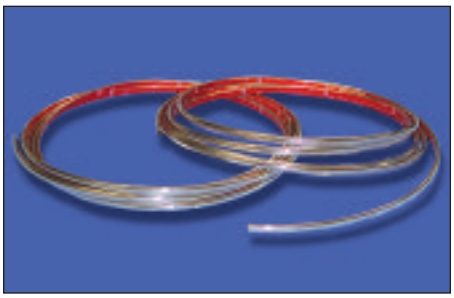

CHROME FENDER TRIM

3/8" width. Attaches using pre-applied 3M two-sided tape. Sold in 15' length.

CHROME FENDER TRIM
DML DUA1617

UNIVERSAL BACKUP LIGHT SHIELDS

Adds stainless steel look and style to backup lights. Both ends are open. 6" diameter. Attaches using existing hardware. Sold in pairs.

UNIVERSAL BACKUP LIGHT SHIELDS
DML DUABULS

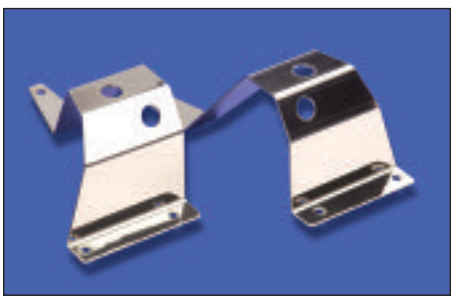

UNIVERSAL BACKUP LIGHT BRACKET

Adds stainless steel look and style to backup lights. Hardware not included. Sold in pairs.

UNIVERSAL BACKUP LIGHT BRACKET
DML DUABULB

See The Next 2 Pages For Additional Universal Accessories

X2AG2 LED LIGHT BARS

Designed to hang by the 2" lip, bolted to any desired area (i.e. Bumper). 4" wide. Choice of amber X2AG2 LED or amber oval 6-1/2" x 2-1/4". Hardware, X2AG2 LED light and wiring harness included with X2AG2 LED model. Hardware, lights and pigtails included with oval light model.

***NOTE: Extra X2AG2 LED Lights available on page 2.**

X2AG2 LED LIGHT BARS	
2 X2AG2 LED light - 15-1/4"	DML DUA067X2A
3 X2AG2 LED light - 22-1/2"	DML DUA068X2A
6" OVAL LIGHT / LIGHT BARS	
1 Light - 9-1/4"	DML DUA066

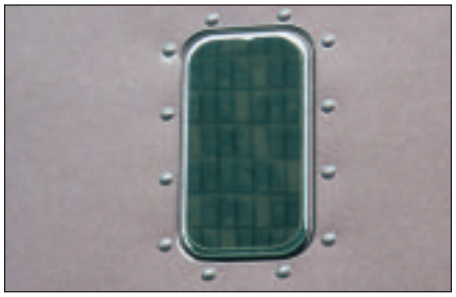

BUNK VENT COVERS

Flat panel which adheres to face of bunk vent using supplied 3M two-sided tape. Measures 4" x 8". No hardware required. Sold in pairs.

BUNK VENT COVERS
ABP FL031

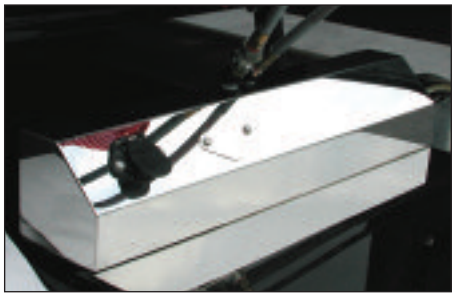

TRAILER SERVICE BOX

Mounts to frame behind cab or sleeper. Corners are welded and polished. 32" wide X 6" tall. Holes are provided for light cable, ABS cable, and air line mounting. Mounting hardware included.

TRAILER SERVICE BOX
DML DUA078

REAR FRAME COVER

Add that stainless steel look to the rear frame. Available plain or with logo cutout. Fastens using supplied hardware. Some drilling required. Sold individually.

REAR FRAME COVER	
With logo cutout	ABP FL102
Plain	ABP FL102A

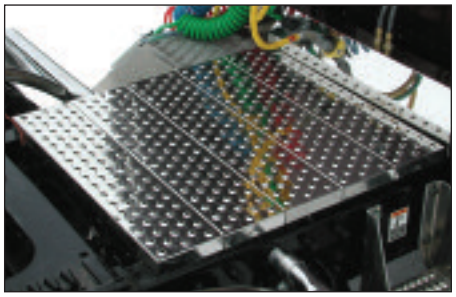

DECK PLATE

Stainless steel deck plate. Available in 7" x 32" individual sections. All hardware included.

DECK PLATE	
7" x 32" Section	DML DUA088

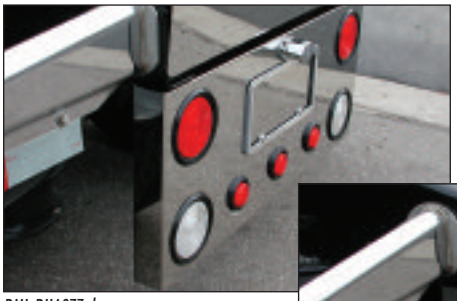

DML DUA077 shown.

DML DUA077A shown.

CENTER REAR 4" ROUND LIGHT BOX

Mounts to underside of frame. Corners are welded and polished. 34" wide x 15" tall. Rear of light box has removable cover. Lights included. Hardware and some wiring supplied.

CENTER REAR 4" ROUND LIGHT BOX
DML DUA077
CENTER REAR 6" OVAL LIGHT BOX
DML DUA077A

CENTER REAR 4" ROUND LIGHT PANEL

A less expensive version of the center rear light box (rear of panel not covered). Mounts to underside of frame. Lights and pigtails included. Hardware supplied.

CENTER REAR 4" ROUND LIGHT PANEL
DML DUA080A

FREIGHTLINER BUSINESS CARD HOLDER

Sold in packages of 10.

FREIGHTLINER BUSINESS CARD HOLDER
ABP FL106

STERLING ACCESSORIES

SUNVISOR
Extra deep sunvisor. Designed to replace factory composite visor. Some drilling required. Includes hardware.

SUNVISOR	
10-1/2" 9500 Plain	ABP DST 046
14" 9500 Series Plain	ABP DST 120

BUG DEFLECTOR
Constructed entirely of stainless steel, these Bug Deflectors are extremely durable and attractive. Drilling of hood required. All hardware included.

GUARANTEED NOT TO BREAK

BUG DEFLECTOR	
9500 Series	ABP DST 026
Acterra	ABP DST 114

DOOR HANDLE TRIM
Protects paint around door handle. Easily mounts to inset of door handle using supplied 3M two-sided tape. Sold in pairs.

BUNK DOOR HANDLE TRIM
Accents bunk door handle. Mounts using supplied 3M two-sided tape. Sold in pairs.

DOOR HANDLE TRIM	
Door Handle Trim	ABP DST 106
Bunk Door Handle Trim	ABP DST 107

See The Next 2 Pages For Additional Sterling Accessories

BUMPER INSERTS

Three-piece bumper inserts. Panels fasten using supplied 3M two-sided tape. No hardware required.

BUMPER INSERTS
ABP DST 009

CAB SKIRTS

Available for the 9513 and 9522 configurations. Cab skirts are 4-1/2″ wide for the 9513 models and 7″ wide for the 9522 models. Attach using supplied hardware. Lights and harness included. Bezels not included on 2" round lights.

CAB SKIRTS W/BLOCKHEATER HOLE	
9513 Model Plain	ABP DST 112
9513 Model with X3AG2 LED lights (5)	ABP DST 130
9513 Model With 2″ Round lights (5)	ABP DST 113
9522 Model Plain	ABP DST 119
9522 Model w/ X2AG2 LED lights (4)	ABP DST 128
9522 Model w/ X3AG2 LED lights (6)	ABP DST 129

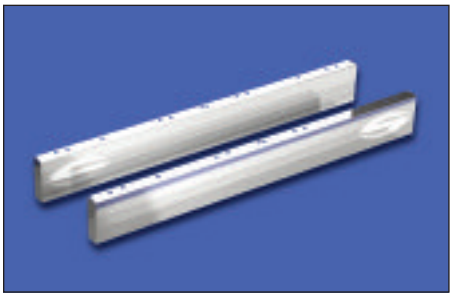

SLEEPER SKIRTS

68″ long. Attaches easily to the underside of sleeper using supplied hardware. Sold in pairs.

9500 MODEL SLEEPER SKIRTS	
Plain	ABP DST 125
With Logo	ABP DST 127

BLOCK HEATER HOLE TRIM PLATE

Covers surrounding area of the block heater hole. Fastens using supplied 3M two-sided tape and four bolts on block heater. Sold in pairs.

BLOCK HEATER HOLE TRIM PLATE
ABP DST 085

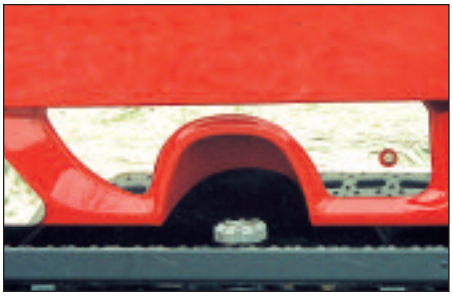

DOOR KICK PLATE

Fits on rocker panel below doors. Fastens using supplied two-sided tape. Sold in pairs.

DOOR KICK PLATE	
With fuel access cutout middle	ABP DST 109
With fuel access cutout end	ABP DST 109E
Without fuel access cutout	ABP DST 109S

ABP DST 109 shown.

SILL / SCUFF PLATE

Attaches using supplied 3M two-sided tape. Finished with non-slip grip tape on surface of panel. Sold in pairs.

SILL / SCUFF PLATE	
Plain	ABP DST 3420
For 9500 series w/etched Sterling logo	ABP DST 118

UNDER HEADLIGHT FENDER GUARD

Protects paint from stone chips and road debris. For Acterra 2005 + Models. Mounts using supplied hardware. Sold in pairs.

FENDER GUARDS
ABP DST 116

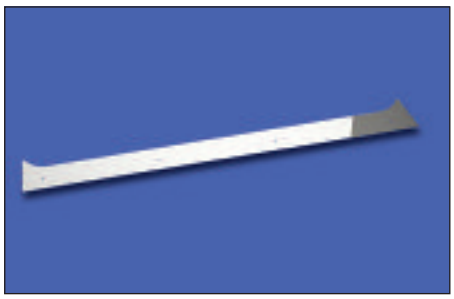

LOWER GRILLE TRIM

Adds that finished look under the grille between the fender guards. For Acterra 2005 + models. Attaches using supplied hardware.

LOWER GRILLE TRIM
ABP DST 117

9513 BELOW CAB TRIM

For 9513 models. Mounts using supplied hardware. Sold in pairs.

9513 BELOW CAB TRIM
ABP DST 126

BATTERY BOX COVER

For 9500 series. 15" wide. Hardware supplied. Sold individually.

BATTERY BOX COVER
ABP DST 122

ALLIANCE
TRUCK PARTS

To locate your nearest dealer please visit
alliancebrandparts.com

DTNA/PSM-M-203. Specifications are subject to change without notice. © 2009 Daimler Trucks North America LLC. All rights reserved. Alliance Parts is a brand of Daimler Trucks North America LLC. Freightliner Trucks is a division of, and Sterling Truck Corporation is a subsidiary of Daimler Trucks North America LLC, a Daimler company.